



EL-120

1. 07920	Torch Body	9. 514914	Extended Tip 70A 120HY
07921	Torch Body 180 Degree	10. 60480	Shield Cup STD 30 / 60A
2. 52600	Electrode	60481	Shield Cup STD 60 / 120A
3. 52603	Extended Electrode	11. 60482	Shield Cup Body 30 / 60A 120HY
4. 07923	Start Cartridge 20 / 120A	60483	Shield Cup Body 60 / 120A 120HY
5. 07924	Insulator Hf 30 / 120A	12. 60485	Shield Cap, Hand 30 / 60A 120HY
6. 60060	Gas Distributor 30 / 60A	13. 60486	Shield Cap, Hand 60 / 120A 120HY
60061	Gas Distributor 60 / 120 A	14. 60491	Extended Shield Cap, Hand
7. 51470	Tip 30A		30 / 60A 120HY
51471	Tip 40A	15. 60444	Double Point Spacer
8. 51480	Tip 30A 120 HY	16. 07106E	Handle C / W Switch
51482	Tip 50 / 60 A 120HY		
9. 51497	Extended Tip 30A 120HT		